AUSLOCK

Lock Better. Live Better.

User Manual

H06 -TB

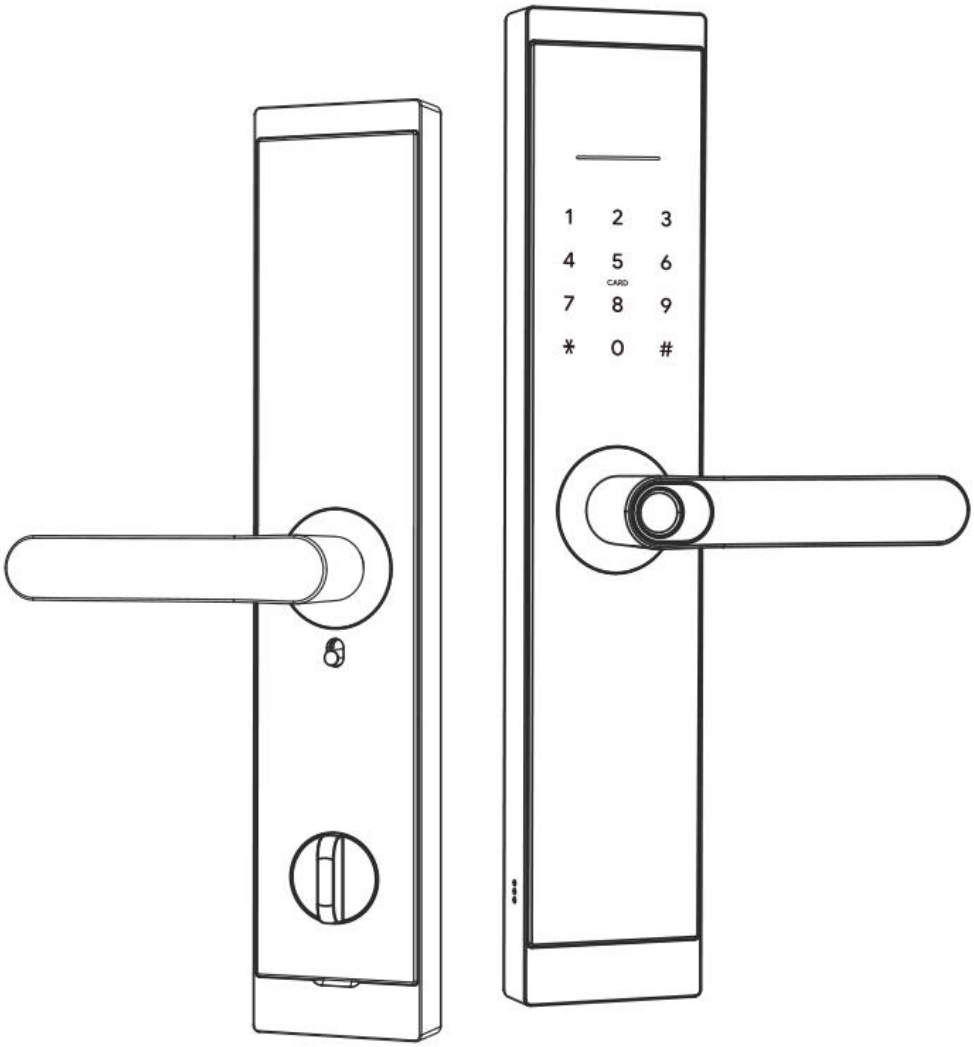

Special Attention:

1. Please keep override keys out side of premises just in case you need to use them.
2. lock also has a power bank override on the front panel in case locks are inside.
3. Please replace batteries immediately once receiving any notification via lock or App

1.Introduction

1.1.Lock structure

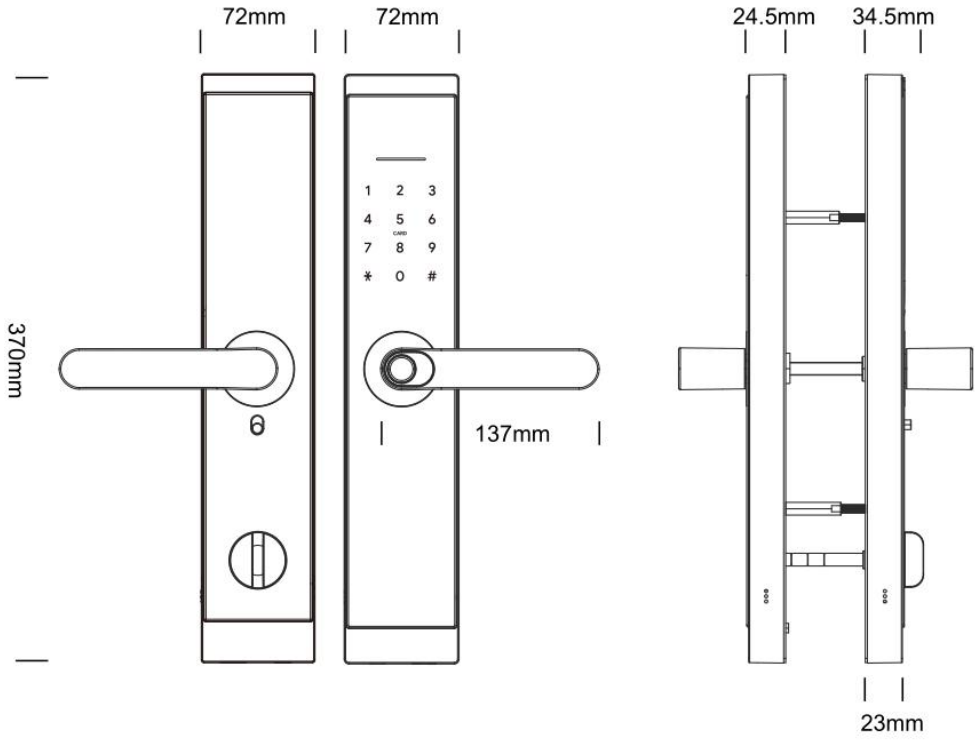

1.2.Packing List

Check the following list to check whether the package contains all the parts.

NO	Name	Qty		NO	Name	Qty
1	Front Panel	1		12	Mortise Screws:KM5*10mm (For Aluminum Door)	4
2	Back Panel	1		13	Mortise Screws:KA4*20mm (For Wooden Door)	4
3	Mortise	1		14	Screw Stubs:M5*30mm	2
4	Card	3		15	Screw Stubs:M5*35mm	2
5	Mechanical Key	2		16	KM5*25mm Screw	1
6	Waterproof Rubber Plate	2		17	KM5*30mm Screw	1
7	Strike&Strike Box	1+1		18	KM5*40mm Screw	1
8	User Manual	1		19	KM5*50mm Screw	1
9	U-Clip	1		20	KM5*60mm Screw	1
10	Sliding screw:M5*10mm	1		21	75mm Square shaft	1
11	60mm Square shaft	1				

1.3.Specifications

Suitable for Models	H06-TB	Doors Applicable	Aluminum door Wooden door
Materials	Aluminum alloy	Working Voltage	6V/4x AA Batteries
Lock Weight	3KG	Door Thickness to Fit	35-60mm
Unlocking Way	Bluetooth Fingerprint(option) Password Card Mechanical key Gateway(option)	Data Capacity	Fingerprint：200(option) Password：150 Card：200
Color	Black	Working Temperature	-10℃-55℃
Low Wattage Alarm	Less than 4.8V	Working Humidity	0-95%

1.4.System Initialization

Open the cover of the battery. Then hold the Reset" button as shown on the image for 5s. After that press “000#” on the touch pad to complete the system reset.

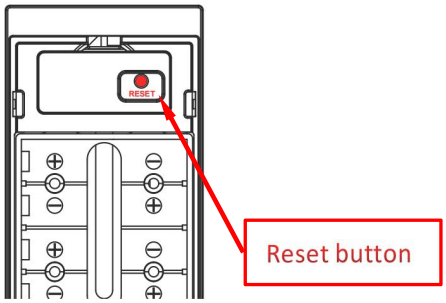

1.5.Electronic Locking Button

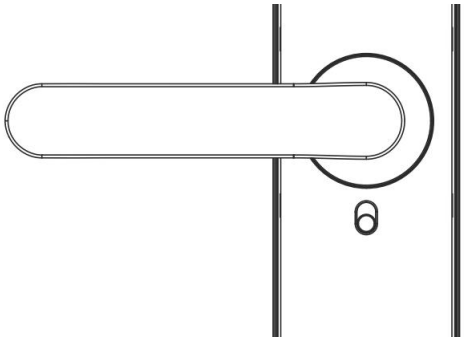

1.If you want to have the Electronic Locking function, first turn on "privacy lock" on the app

2.When the button is in the red state, it is in the locked state and can only be unlocked through the administrator app or mechanical key.

2.Installation

2.1.Adjust the Handles Direction

Notice: Adjust the handle according to the direction you open the door.

If the door opens to the left, with the handle facing left. The door opens to the right, with the handle facing right.

*Improper installation may result in door staying unlocked.

For Exterior Assembly:

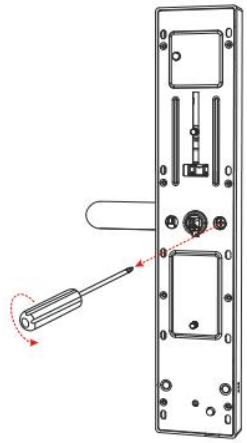

1.Loosen the screw.

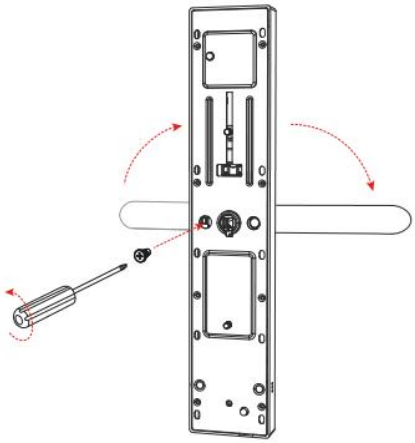

2.Rotate lever 180 degrees.
Tighten reverse screw.

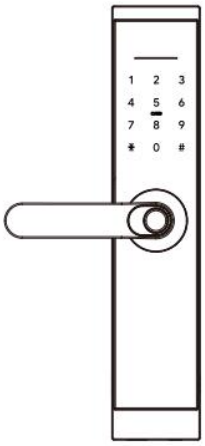

3.Complete Installation.

For Interior Assembly:

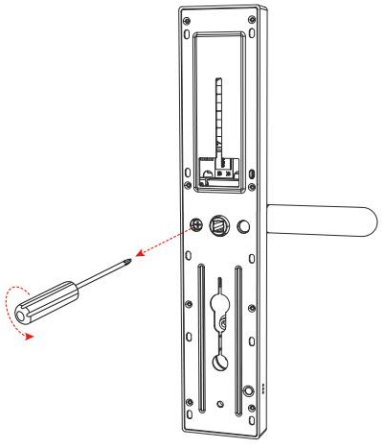

1.Loosen the screw.

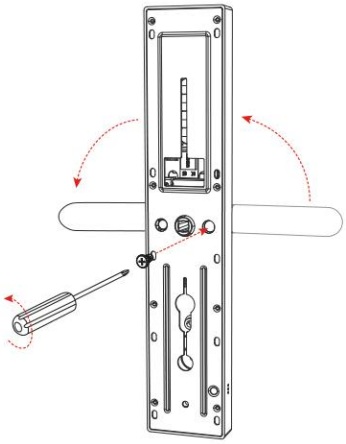

2.Rotate lever 180 degrees.
Tighten reverse screw.

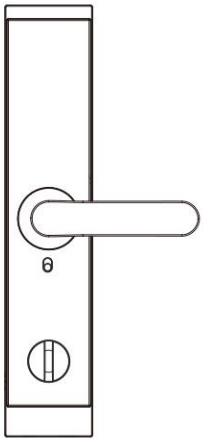

3.Complete Installation.

2.2.Installation Diagram

Step 1 Install Mortise

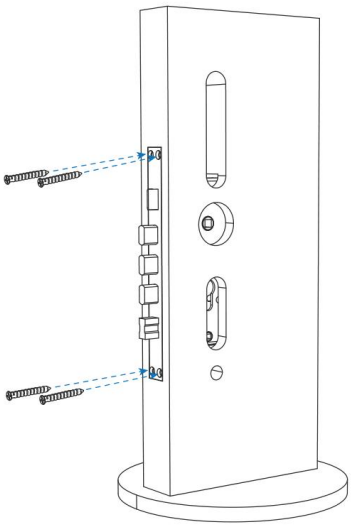

Install the mortise into the door with screws.

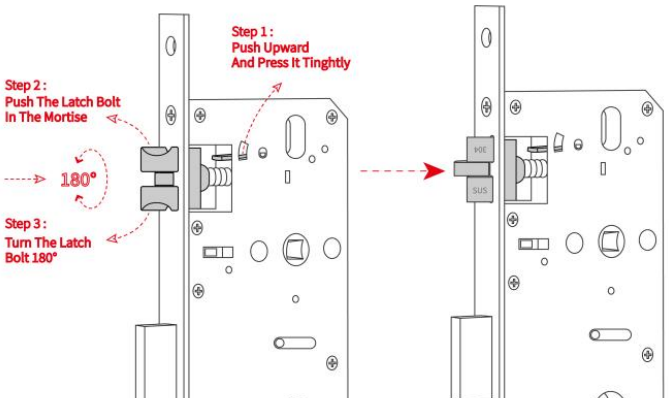

Step 2 Install Exterior Assembly

1.Install the waterproof rubber plate to exterior assembly.
2.Install square shaft into spindle hub,keep the arrow pointing down.
3.Install 2 screw casings.
4.Install Install the exterior assembly to the door.

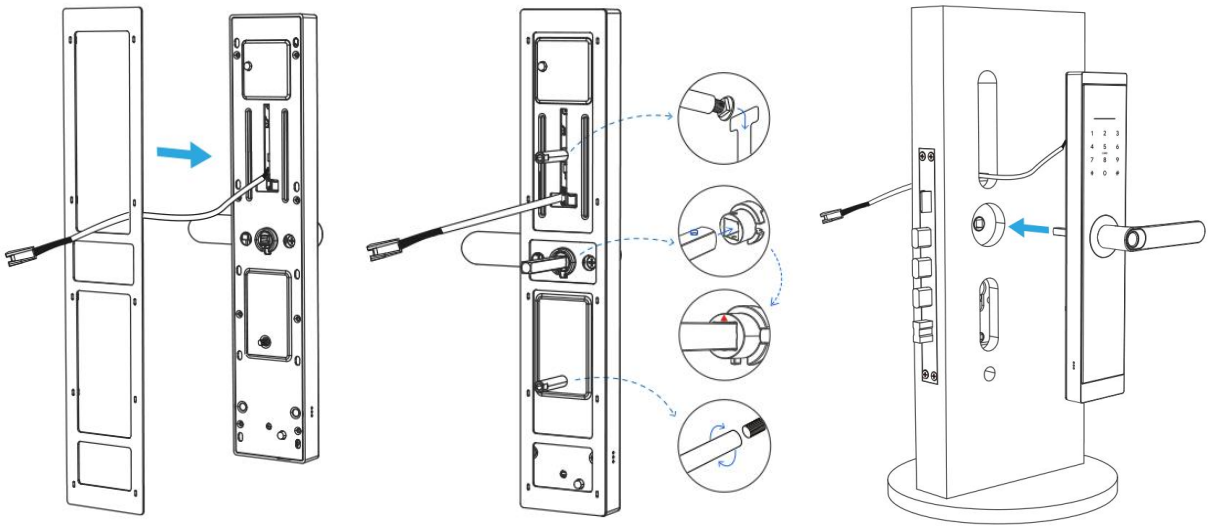

Step 3 Install Interior Assembly

1.Install the waterproof rubber plate.
2.Loosen the Battery cover plate .
3.Connect the wire.
4.Fix Exterior Assembly and Interior Assembly with screws.

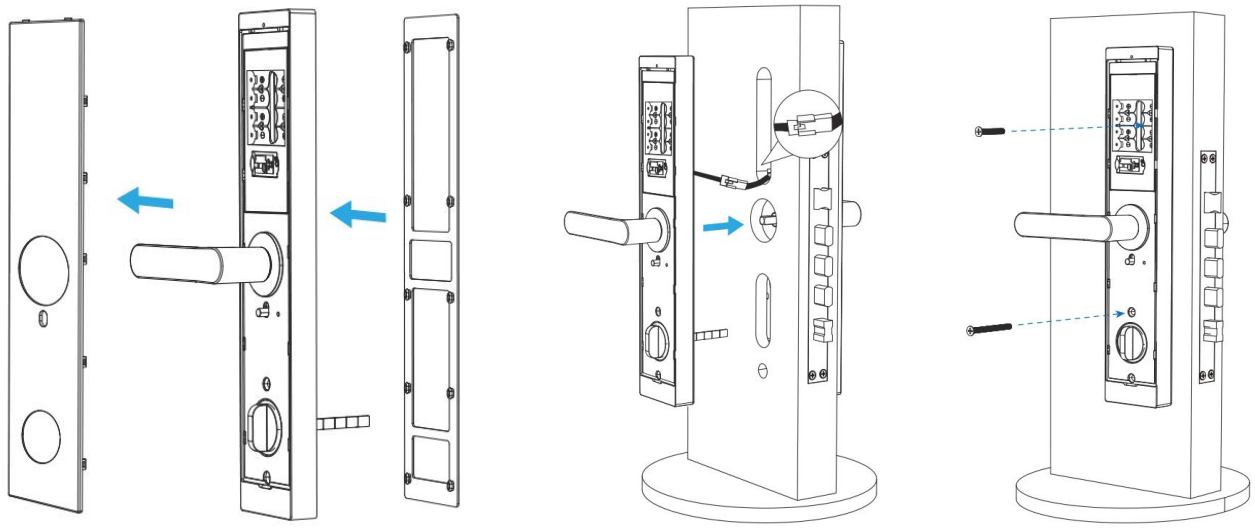

Step 4 Install batteries

1. Insert batteries. 2. Install the battery cover. 3. Complete Installation .

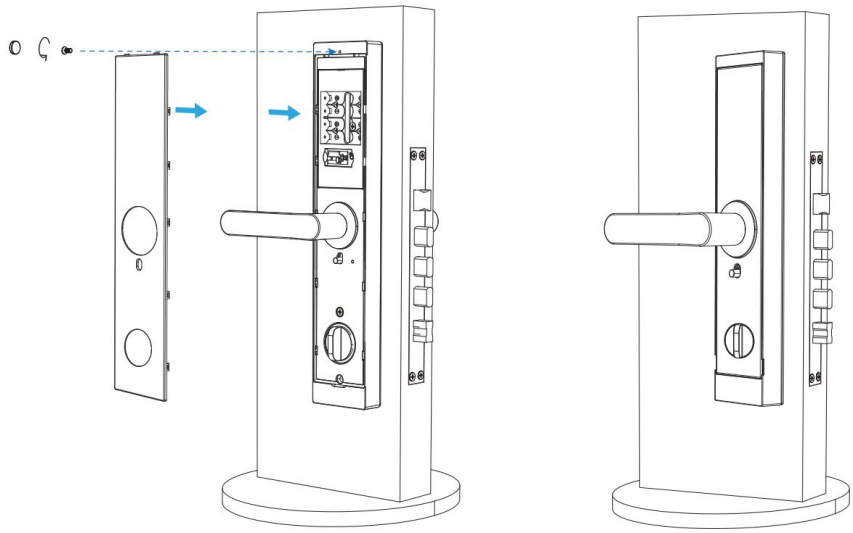

3.App Operation

3.1.Registration

The software (iOS version) can be download from the app store, and the Android version can be downloaded from the application store of Google play, Yingyongbao, Baidu, Ali, 360, Huawei, and Xiaomi.

3.2. Connect lock to the phone

1) please scan the QR code to download the app

2) You can also search for AUSLOCK in the APP store(Google Play)to download

4) Register a new account (phone number or email) or login with an existing account.

5) Touch the lock screen to light, click "+ Add Lock"

6) The lock nearby will appear on the phone screen, Click "+"

7) Re-name the lock

8) The lock added successfully

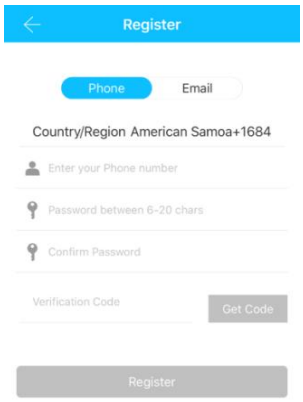

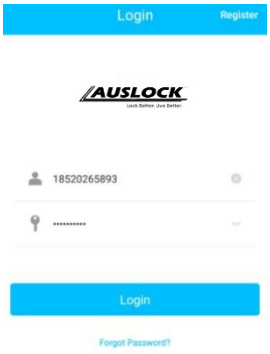

AUSLOCK users can register the account by mobile phone and Email which currently support 200 countries and regions in the world. The verification code will be sent to user's mobile phone or email, and the registration will be successful after the verification.

3.3.Add locks

AUSLOCK supports multiple types of lock devices. The lock needs to be added by the app after entering the add mode. Generally, a lock that has not been added, as long as the lock keyboard is touched, it will enter the add mode. The default password is 123456 if not added by the phone

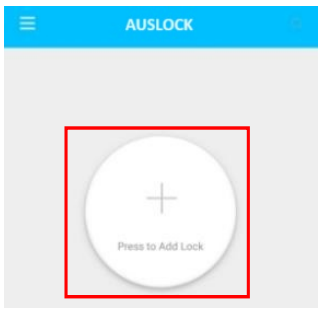

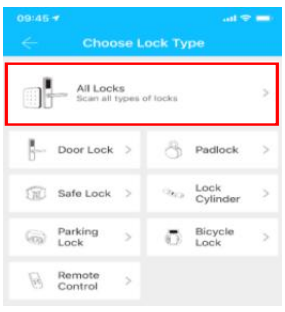

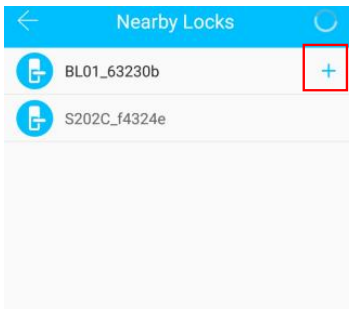

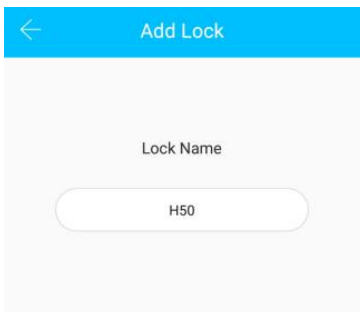

3.4.User Management

3.4.1. Bluetooth management

Make sure there is no problem with Bluetooth communication. After connecting the phone to the door lock as above, Click " *"to unlock.(Make sure the phone is within 5 meters from the door lock)*

3.4.2. Setting Passcode

Pass codes are also a way to unlock. After entering the pass code on the locked keyboard, press the # unlock button in the lower right corner to unlock. Pass codes are divided into permanent, time-limited, one-time, erase, reoccurring, and custom.(You can share the Pass code to other user via WeChat、SMS、Email、Messenger and *Whats App)*

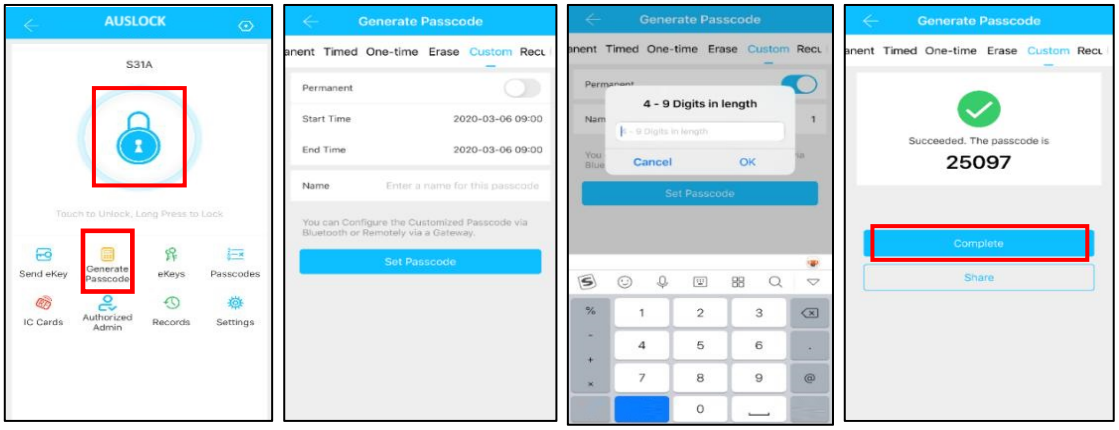

3.4.3. Send e-Key

Click on the " *" as shown in figure, you can send the eKey to other users of AUSLOCK to authorize the unlock(the receiver must download the APP and set up an account)→ Select e-key format (Timed, permanent, One-time, Recurring) → Enter recipient's account of AUSLOCK,set the name and effective time of the eKey, Can choose to allow remote unlocking or disallowing, authorized administrator or not authorized, as shown in figure →Send→The recipient's account has Bluetooth unlock permission.*

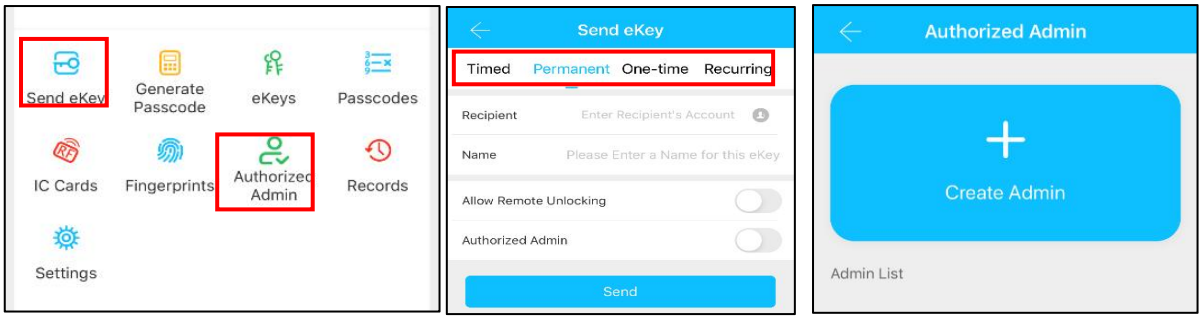

3.4.4.Add card

Supports opening doors through various RF cards. Before an RF card is used to open the door, it needs to be added first. The adding process needs to be performed by the app beside the lock. The validity period of the RF can be set, it can be permanent, or it can be limited in time.

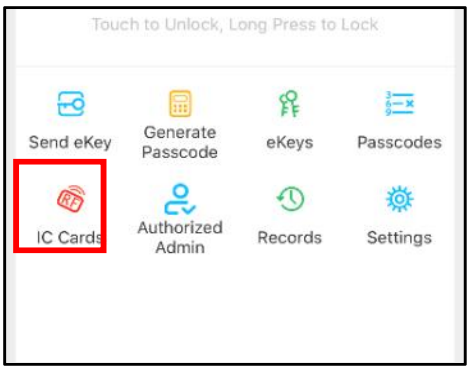

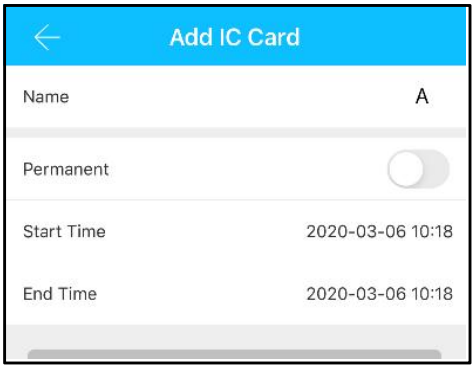

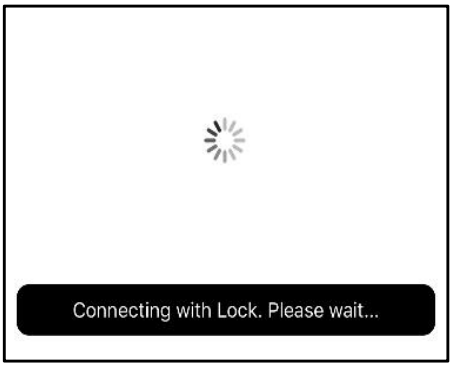

3.4.5. e-Key management

Click " eKeys " The manager can delete ekey, reset ekey, send and adjust the ekey, meanwhile he can search the lock record.

3.4.6. Passcode management

Click " Passcodes .All generated passwords can be viewed and managed in the password management module. This includes a password change, password deletion, password reset, and password unlock record.

3.4.7.Unlock records

Click " Records "you can query your unlock record as shown in figure

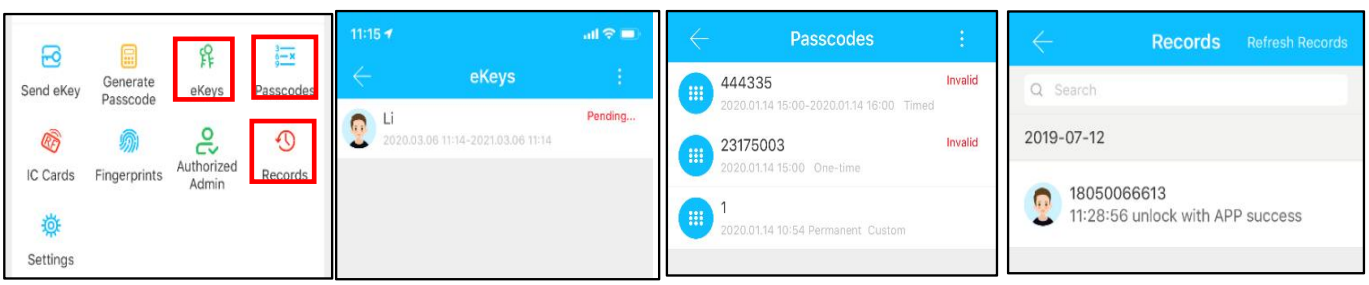

3.5. Gateway management(Optional)

The Auslock smart lock uses Bluetooth to connect to the app. In order to operate the lock remotely using Internet you will need a Gateway. The gateway is a bridge that connects smart locks and the home WIFI network. The Gateway Bluetooth connects to the WI-FI router and to the smart lock (please ensure that the gateway is within 15m of open space to the router and the smart lock). The Gateway allows you to operate the lock remotely when not within Bluetooth range such as Passcodes, Unlock/lock, records checking etc.

3.5.1. Add Gateway

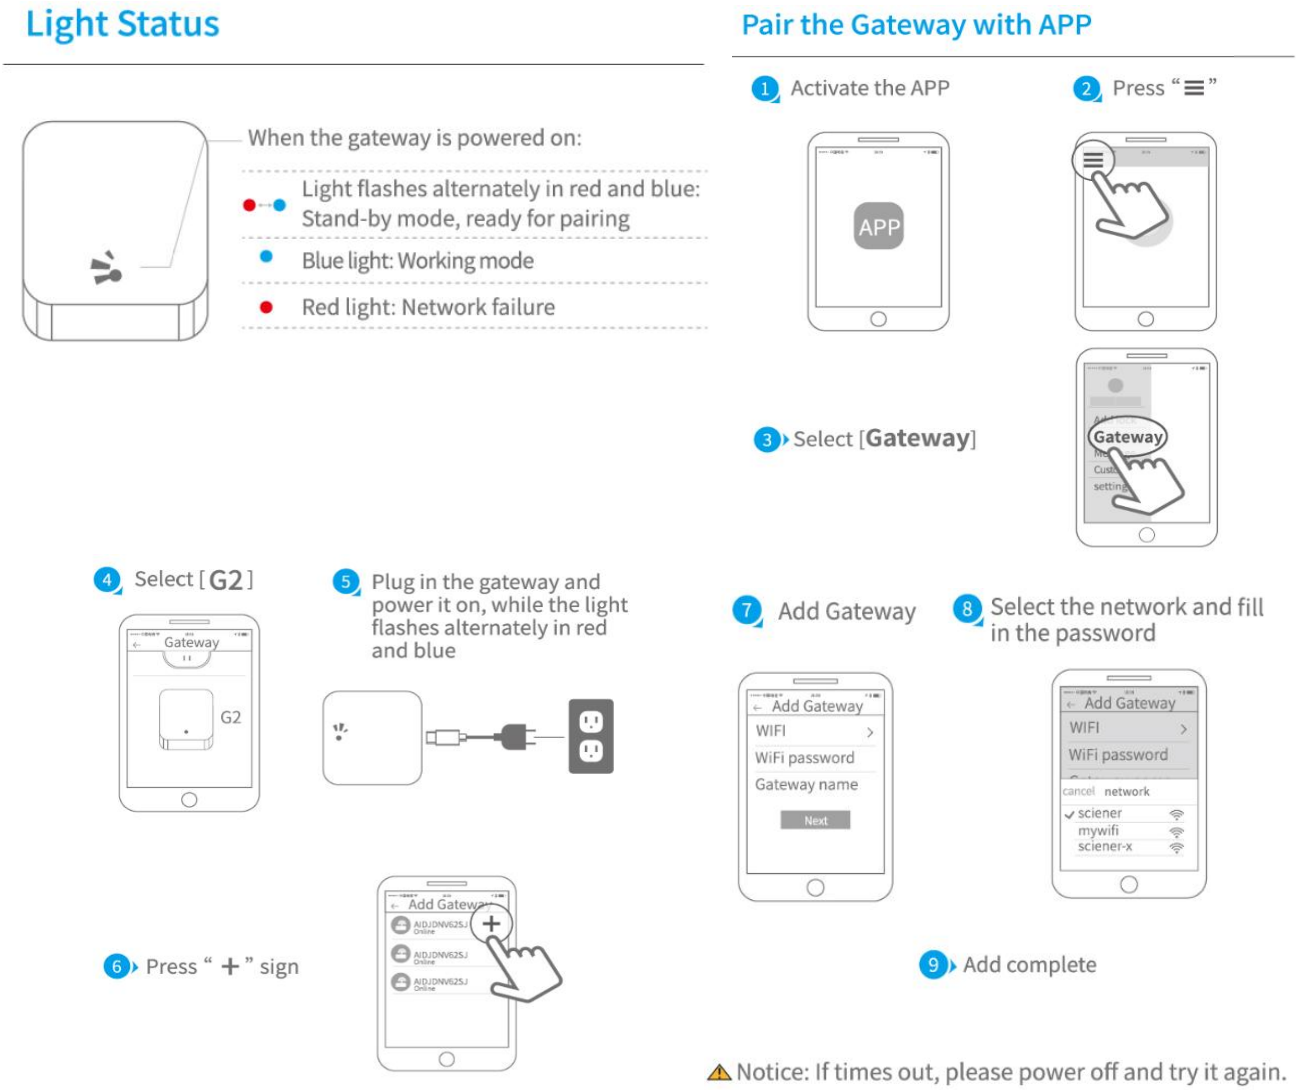

3.5.2. Manual

After a short period of time, you can see which locks are in the coverage zone on the app. Once the lock is bound to the gateway, the lock can be managed through the gateway.

4.FAQ

1) How to read operation records?	In the Records of the main interface. .
2) Why can't I unlock it after setting up passage mode	You need to perform an unlock verification in any method, than the passage mode will take effect.
3) What is the purpose of Auto Lock?	You can set how long to lock it after unlocking
4）After installation, the touch pad & screen has no response.	a) In this case, first check that the positive and negative electrodes of the battery have been installed upside down, whether the battery has enough power b) Remove the back panel and see if it's connected. c) To eliminate the above situation, you need to remove the lock ,check whether the wires of the lock body are squeezed, and when re-wire.
5）Unable to register fingerprint	Check the fingers for dirt or wear, check the fingerprint head on the lock for dirt and oil stains, etc. Check to see if the fingerprint is working properly(Press to see if there is any responds.
6）What is the reason why the smart lock consumes fast power?	a) Large standby power consumption b) Short circuit
7）There is no response to pressing the handle on outside the door, and there is unlock normally on inside the door, but the verification is normal, and the motor is normal.	It may be the triangle(handle) direction on the clutch was error, please check correction.
8）How many times will the password be locked? How long is it locked?	Enter the wrong password more than 5 times in a row, the keyboard is locked for 5 minus, Other ways to can open the door
9）How can i lock my Auslock physically if auto lock is off or if the lock is in passage mode?	you can lock it by press and holding the * key on the touch pad .

Guarantee

AUSLOCK

Lock Better. Live Better.

Please fill the details in the form below then email the form to admin@auslock.net within 30 days or else full services may not be offered.

Customer Full Name : _____

Customer Contact No. : _____

Place of Purchase (store) : _____

Purchase Date : _____

Product Name : _____

Product Model : _____

1) lease do not lose this card just in case you might need it for warranty service.

2) We provide you with a one-year warranty from the date of purchase. Visit www.auslock.com

3) This warranty service is valid for customers in any country.