CARBINE

THE NEXT GENERATION IN LOCKING

KEYSAFES

Instructions. Model: **CKB-W-NC-XL**

Keysafe Large Wall Mount Keyed

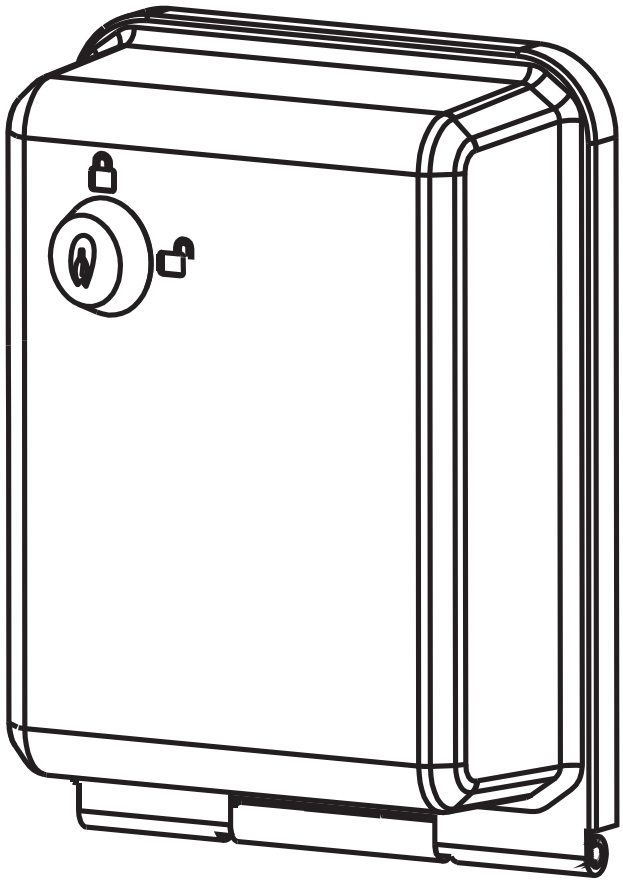

INSTALLATION INSTRUCTIONS

Operation

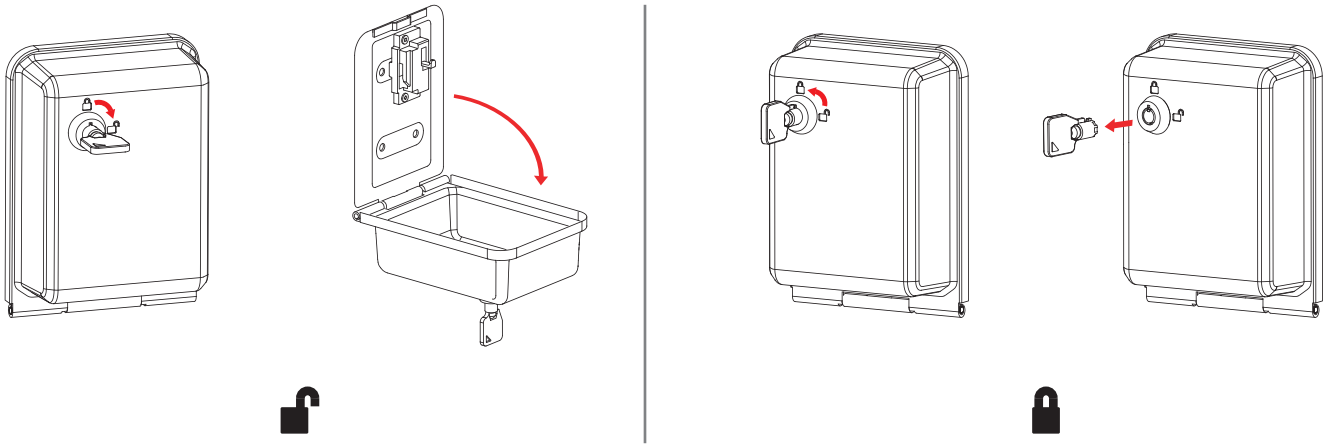

WALL MOUNTING KEY STORAGE LOCK BOX

Additional Installation Tools Scissor / Damage-Free tape / Hammer

1. Cut the Drilling Dimension Drawing from the user guide. (Fig. A) - See following page.
2. Position the Drawing as desired and stick it on the wall with damage-free tape. (Fig. B)
3. Drill the holes and remove the drawing. (Fig. C)
4. Insert wall plugs. (Fig. D)
5. Pierce the foam spacer of the screw holes on the Key Storage Lock Box to align the holes. (Fig. D)
6. Screw Key Storage Lock Box to wall via wall plugs. (Fig. D)

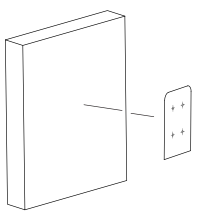

Fig. B

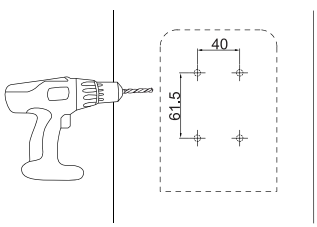

Fig. C

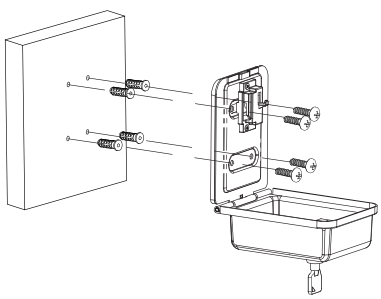

Fig. D

Drilling template next page

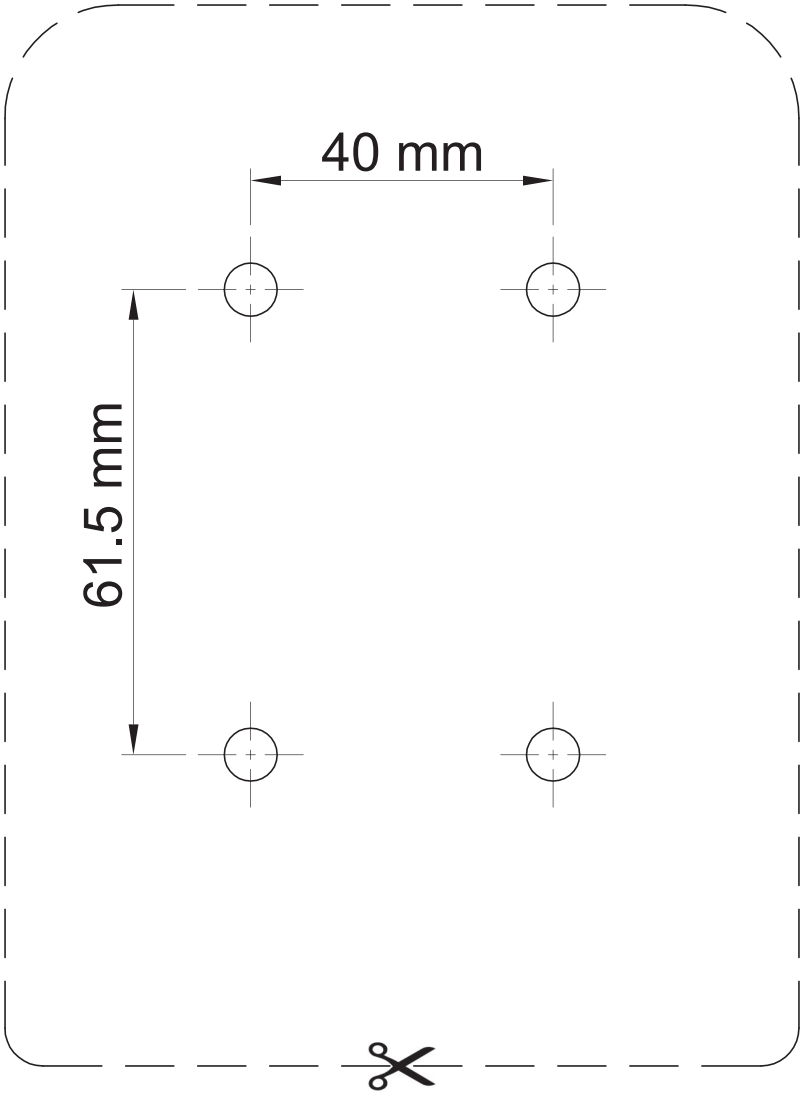

Fig. A

KEYSAFES RANGE

THE NEXT GENERATION IN LOCKING

AUSTRALIA
HEAD OFFICE
14 John Hines Avenue
Minchinbury NSW 2770
1300 722 311
sales@carbine.com.au

WWW.CARBINE.COM.AU

V1.0-2402